


- ❑ The maximum load capacity for the combination of both SmartLet outlets is 15 Amps.
- ❑ There are no user-serviceable parts inside the SmartLet. Unauthorized dismantling will void the warranty. For warranty information, see [www.autani.com/legal](http://www.autani.com/legal)

2

Remove the screw from the electrical outlet wall plate. Remove the wall plate if it is metal or interferes with mounting the SmartLet flush to the wall.




An unsecured metal wall plate could come in contact with the SmartLet plug prongs, causing risk of shock.

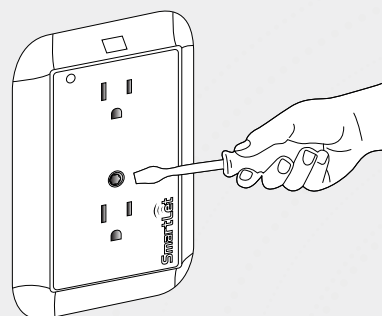

**NOTE:** The SmartLet can be plugged into a NEMA 5-15R or NEMA 5-20R receptacle. The load switching capacity is 15 Amps.



NEMA 5-15R

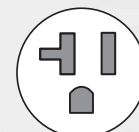

NEMA 5-20R

3

Screw the SmartLet to the electrical outlet using a T10 Torx screwdriver and the provided T10 Torx screw.



T10 torx screw	U.S.	Metric
Length	1.25 in.	31.75 mm
Point-to-Point	0.107 in.	2.72 mm
Maximum Torque Range	2.7 to 3.3 ft lb	3.7 to 4.5 nm

1

On the provided list of device serial numbers, document the location for each SmartLet.

